 

 
FLIP

 
02-11-2015



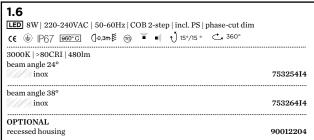

OPTIONAL, (ORDER SEPARATELY) recessed housing





with recessed housing

 









DIMENSIONS



MOUNTING INSTRUCTION

Remove the protective foam inside of the FLIP. If you want to adjust the beam angle, this is the right time.

 Make sure to screw the screws back on, crosswise, to ensure IP67



- 2 Make a hole in the ground according to the prescribed dimensions (of the recessed housing)
- 3 Drainage: we recommend that all exterior groundspots should be installed with a drainage level even when using a recessed housing





POWER CONNECTION

Exterior: WATERPROOF Connection




MOUNTING WITH RECESSED HOUSING

(5) Use the bolts and the nuts to attach the FLIP to the recessed housing


FLIP

02-11-2015

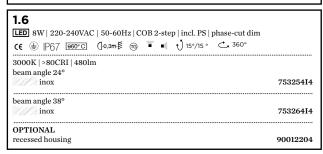


without recessed housing

A. Attached to the floor (or wall, for wall mounting)

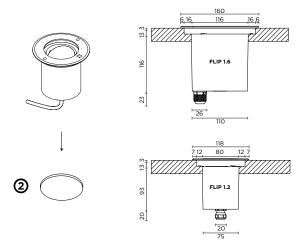



B. Rests on the stainless steel borders of the fixture

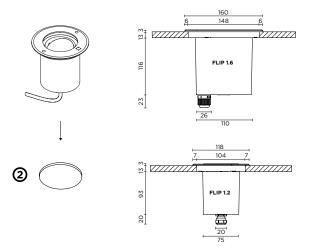

- **A.** Attached to the floor (or wall, for wall mounting)
- (5) Use the screws to attach the FLIP to the floor or wall.

  Make sure to measure correctly so that you can screw onto a hard material

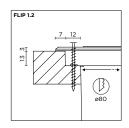



- B. Rests on the stainless steel borders of the fixture
- S Place the FLIP into the hole, no tools needed to fix it into the hole. Just let it rest on the stainless steel borders of the

