

NOP


07-04-2014

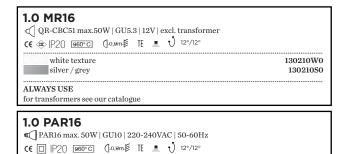

130220W0

130220S0

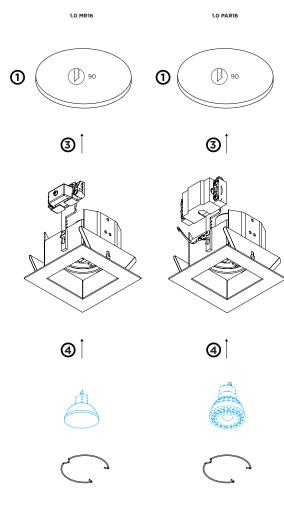

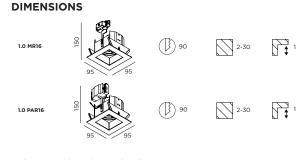

MOUNTING INSTRUCTION


Make a hole in the ceiling according to the prescribed dimensions.

POWER CONNECTION

2 PARALLEL CONNECTION



for MR16 : Always use 12V TRANSFORMER



- 3 Insert the fixture in the hole
- 4 Insert the lamp and fix with spring

white texture

for PAR16 lamps see our catalogue

silver / grey

OPTIONAL