

# STRANGE

25-07-2016

## 1.0 LED

**LED** 7/10W | 350-500mA | 18Vf | COB 3-step | excl. power supply

CE IP20 960°C 0,3m TE 35°/35° 355°

white texture  
black texture

131161W\_  
131161B\_

### LIGHT COLOUR

2700K | >90CRI | 420-590lm | 18Vf 3

3000K | >90CRI | 470-640lm | 18Vf 5

1800-2850K | >90CRI | 320-440lm | 18Vf 9

### ALWAYS USE

plaster kit 90017116  
for power supplies see our catalogue

## 1.0 PAR16

PAR16 max. 35W | GU10 | 220-240VAC | 50-60Hz

CE IP20 960°C 0,9m 35°/35° 355° DO NOT COVER

white texture  
black texture

131120W0  
131120B0


### ALWAYS USE

plaster kit 90017116

### OPTIONAL

for PAR16 lamps see our catalogue



plaster kit (has to be ordered separately)





1.0 LED

1.0 PAR16




①




②

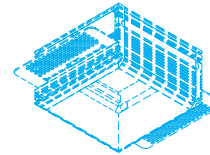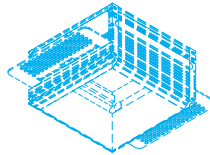

④

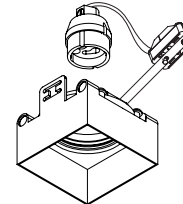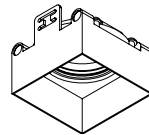

## DIMENSIONS

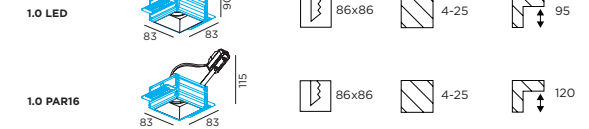


## MOUNTING INSTRUCTION


- ① Make a hole in the ceiling according to the prescribed dimensions (always use a plaster kit)
- ② Click in the upper part of the fixture into the ceiling and plaster the borders seamlessly

## POWER CONNECTION


- ③ SERIAL CONNECTION - for LED  
Always use **POWER SUPPLY** according to the specifications of the LED-module



### PARALLEL CONNECTION - for PAR16



- ④ Insert the fixture in the upper part. Place the LED-module or PAR16 lamp and fix with spring.
- ⑤ SAFETY DISTANCE FOR HALOGEN LAMPS .....

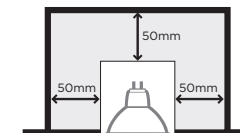

WEVER & DUCRÉ  
LIGHTING

[www.weverducre.com](http://www.weverducre.com)

INSTALLATION  
INSTRUCTIONS


# STRANGE 1.0 & SNEAK 1.0 PLASTER KIT

15-Nov.-2016


plaster kit

90017116-02


plaster kit (has to be ordered separately)

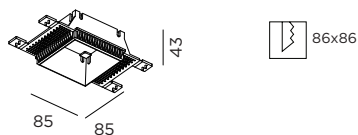

NOTE: There are 4 foldable gaskets on the plaster kit.

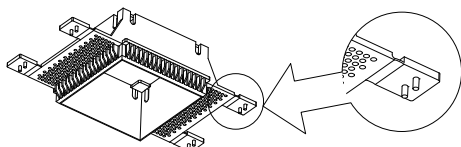

When the thickness of wood board is 12mm, the gasket will be **opened**;


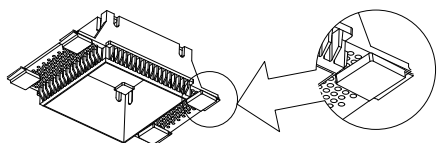


when the thickness of wood board is 9mm, the gasket should be **folded**.



1.0 LED

1.0 PAR16



①



②

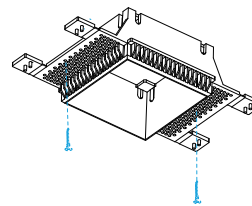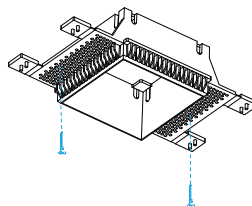


④

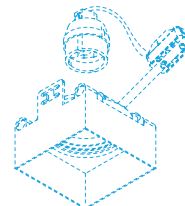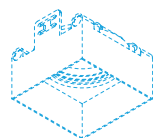


## DIMENSIONS

1.0 LED



1.0 PAR16



## MOUNTING INSTRUCTION

- ① Make a hole in the ceiling according to the prescribed dimensions (always use a plaster kit)
- ② Click in the plaster kit into the ceiling and screw it tightly on the ceiling, then plaster the borders seamlessly.
- ③ POWER CONNECTION
- ④ Insert the fixture in plaster kit.  
for LED: Place the LED-module in the fixture.  
for PAR16: Place the PAR16 lamp in the fixture and fix with spring.



WEVER & DUCRÉ  
LIGHTING

[www.weverducre.com](http://www.weverducre.com)

Wever & Ducre bvba Kwadestraat 153 bus 2.1 8800 Roeselare

INSTALLATION  
INSTRUCTIONS