

STRANGE

25-07-2016

1.0 LED111

LED 10W | 220-240VAC | 50-60Hz | AC-COB 3-step | phase-cut dim

CE IP20 960°C 0,9m TE 35°/35° 355°

white texture

131368W_

black texture

131368B_

LIGHT COLOUR

2700K | >80CRI | 715lm

2

3000K | >80CRI | 730lm

4

ALWAYS USE

plaster kit

90017118

1.0 ES111

ES111 max. 75W | GU10 | 220-240VAC | 50-60Hz

CE IP20 960°C 0,9m TE 35°/35° 355°  DO NOT COVER

white texture

131320W0

black texture

131320B0

ALWAYS USE

plaster kit

90017118

OPTIONAL

for ES111 lamps see our catalogue

1.0 QR111

QR111 max. 75W | G53 | 12V | excl. transformer

CE IP20 960°C 0,9m TE 35°/35° 355°  DO NOT COVER

white texture

131330W0

black texture

131330B0

ALWAYS USE

plaster kit

90017118


OPTIONAL

for transformers see our catalogue


plaster kit (has to be ordered separately)





①

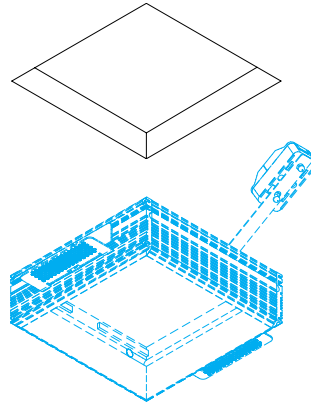


②

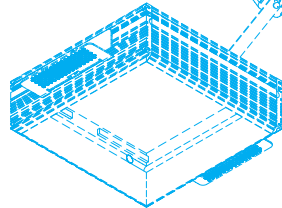


④

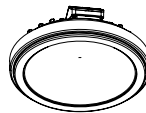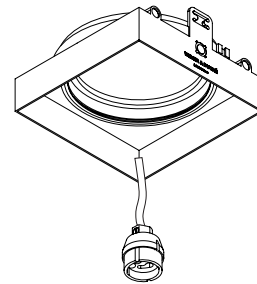

1.0 LED111

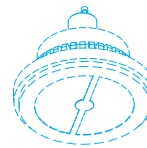

1.0 ES111

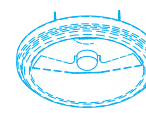


1.0 QR111



DIMENSIONS


1.0 LED111

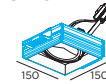

1.0 ES111




1.0 QR111

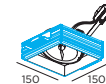

MOUNTING INSTRUCTION


- ① Make a hole in the ceiling according to the prescribed dimensions (always use a plaster kit)
- ② Insert the upper part of the fixture into the ceiling and plaster the borders seamlessly
- ③ **POWER CONNECTION**

PARALLEL CONNECTION - for LED | ES111

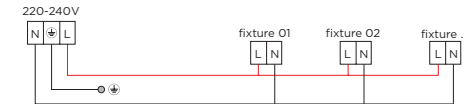


PARALLEL CONNECTION - for QR111

Always use 12V TRANSFORMER

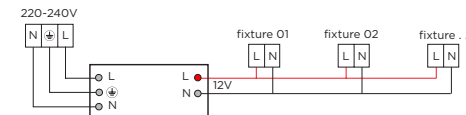

- ④ Insert the fixture in the upper part. Place the LED-module or lamp and fix with spring.

SAFETY DISTANCE FOR HALOGEN LAMPS

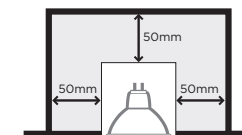

WEVER & DUCRÉ
LIGHTING

www.weverducre.com

INSTALLATION
INSTRUCTIONS