

PENDANTS: twenty-six

MOUNTING: white powder coated square canopy 600mm (23.6") x

53mm (2") deep

LAMPING: 1w LED

COAX: fixed lengths. 3000mm (10') standard / up to

30500mm (100') maximum

MATERIALS: blown glass, copper mesh, braided metal coaxial cable,

electrical components, white powder coated canopy

WEIGHT: approximately 32.7kg (72lb)

TRANSFORMERS: integral

## DESCRIPTION

76.26 is a random configuration of twenty-six 76 pendants hung from a square canopy. The drop lengths of the pendants are randomized between a client specified range of heights to variously cluster and scatter. The result is an ambient installation or field of light.

A vacuum is introduced to a strata composed of hot white and clear glass with copper mesh between. The vacuum causes the white layer to pull away through the embedded mesh, leaving numerous tendrils of white glass suspended within an interstitial space as it goes.

## NOTES

- + Purchase replacement lamps online at www.bocci.ca/lamps
- + As an alternative to built-in transformers, Bocci recommends mounting transformers remotely in an easily accessible and hidden location for ease of long-term maintenance.

US Patent # D817,524 S EU Design Patent # 002840975-0004-0007



Made in Vancouver. Canada

Berlin Vancouver sales@bocci.ca

europe@bocci.ca www.bocci.ca

approx 32.7kg (72lb)

76.26 Design by Omer Arbel PRODUCT SPECIFICATION




www.bocci.ca

600 (23.6") 470 (18.5")

1

Measure and mark the light fixture canopy position on the ceiling

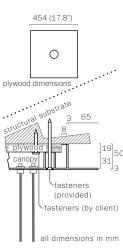

3

white (110V) Neutral (white) (black) black (LED) brown (230V) black (110V) white (LED) blue (230V) NTEGRAL white (110V)

line voltage

white (LED)


- blue (230V)


REMOTE


black (LED)

brown (230V)

black (110V)

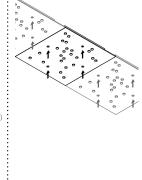

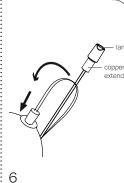

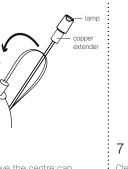


Bocci 1w LED lamps are included. Plug the lamp into

Hold lamp wires away from the pendant to ensure they do not interfere with spinning

Thread centre cap back on to pendant hardware.

the inner glass bubble.



Clean fingerprints from glass surfaces.

Turn fixture on.

For additional assistance. please contact Bocci:

Vancouver sales@bocci.ca www.bocci.ca

Berlin europe@bocci.ca www.bocci.ca

**US Patent Pending** 

EU Design Patent # 002840975-0004-0007

Made in Vancouver, Canada





2

Note: The client is responsible for providing a robust 19mm (3/4") plywood backing or wood blocking to securely anchor to the structural substrate.

Connections from the plywood to the structural substrate are the client's responsibility.

Measure the plywood so that it fits within the canopy side walls (refer to detail above).

Anchor the plywood backing to the structural ceiling substrate.

Connect transformers inside the canopy to line voltage.

Connect the black wire to black and white wire to white

For the ground connection, connect the green wire with yellow stripe to the bare copper wire or green wire in the junction box.

Note: As an option, Bocci recommends mounting transformers remotely in a close, accessible and hidden location for ease of long term maintenance. Installation to be done by certified personnel to ensure compliance with the code.

Anchor canopy into the plywood backing using the fasteners provided.

4

sides of the roll then rotate your fingers around each other to unroll the coaxial cable. Use patience: allow the cable

Very carefully uncoil the

braided coaxial cable in a

index fingers into opposite

spool like manner. Insert your

5

to uncoil completely to avoid kinks.

Each pendant terminates in a "headphone jack" type connector, which plugs into a receiving receptacle in the canopy. Clients are encouraged to compose their own pendant configuration on site, thus creating a truly unique fixture. After plugging in each pendant, turn the threaded sheath into place by hand ensuring that it is adequately tightened. Tools are not required.

Remove the centre cap from 76 pendant. Install 76 pendant by sliding the lampholder at the end of the coaxial cable into the groove in the pendant hardware.

flexible copper extender.

DO NOT OVERTIGHTEN

Bend the insulated wires and insert the lamp into the small hole in the pendant. Ensure that the lamp does not touch

Note: when using a dimmer use only low voltage electronic dimmer

BOCCI