



INSTALLATION INSTRUCTIONS - PART A

01

HOLE PATTERN

SYSTEM 1

Ø121 x110

max. 30


12V

Ø 121

min. 110

CEILING

HOLE PATTERN

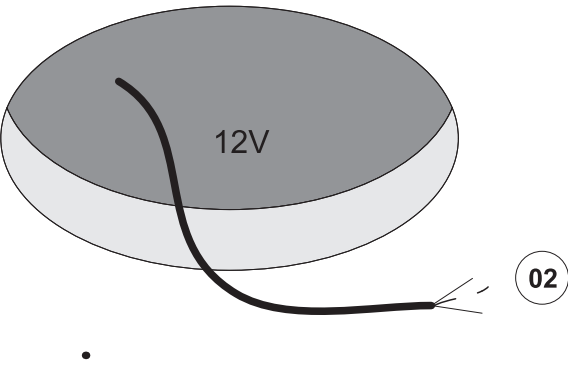

- 01. MAKE HOLE PATTERN
- 02. MAKE THE ELECTRICAL CONNECTION
- 03. OPEN THE THE LAMPBASE
- 04. REMOVE THE COVER
- 05. PLACE THE DEVICE
- FIX THE DEVICE BY TURNING THE SCREWS
- 06. PLACE THE COVER
- 07. PLACE/REMOVE THE LAMP
- 08. CLOSE THE LAMPBASE
- 09. SWITCH ON



02

D

C

B

A

12V


A CONNECT

B

C

D

E

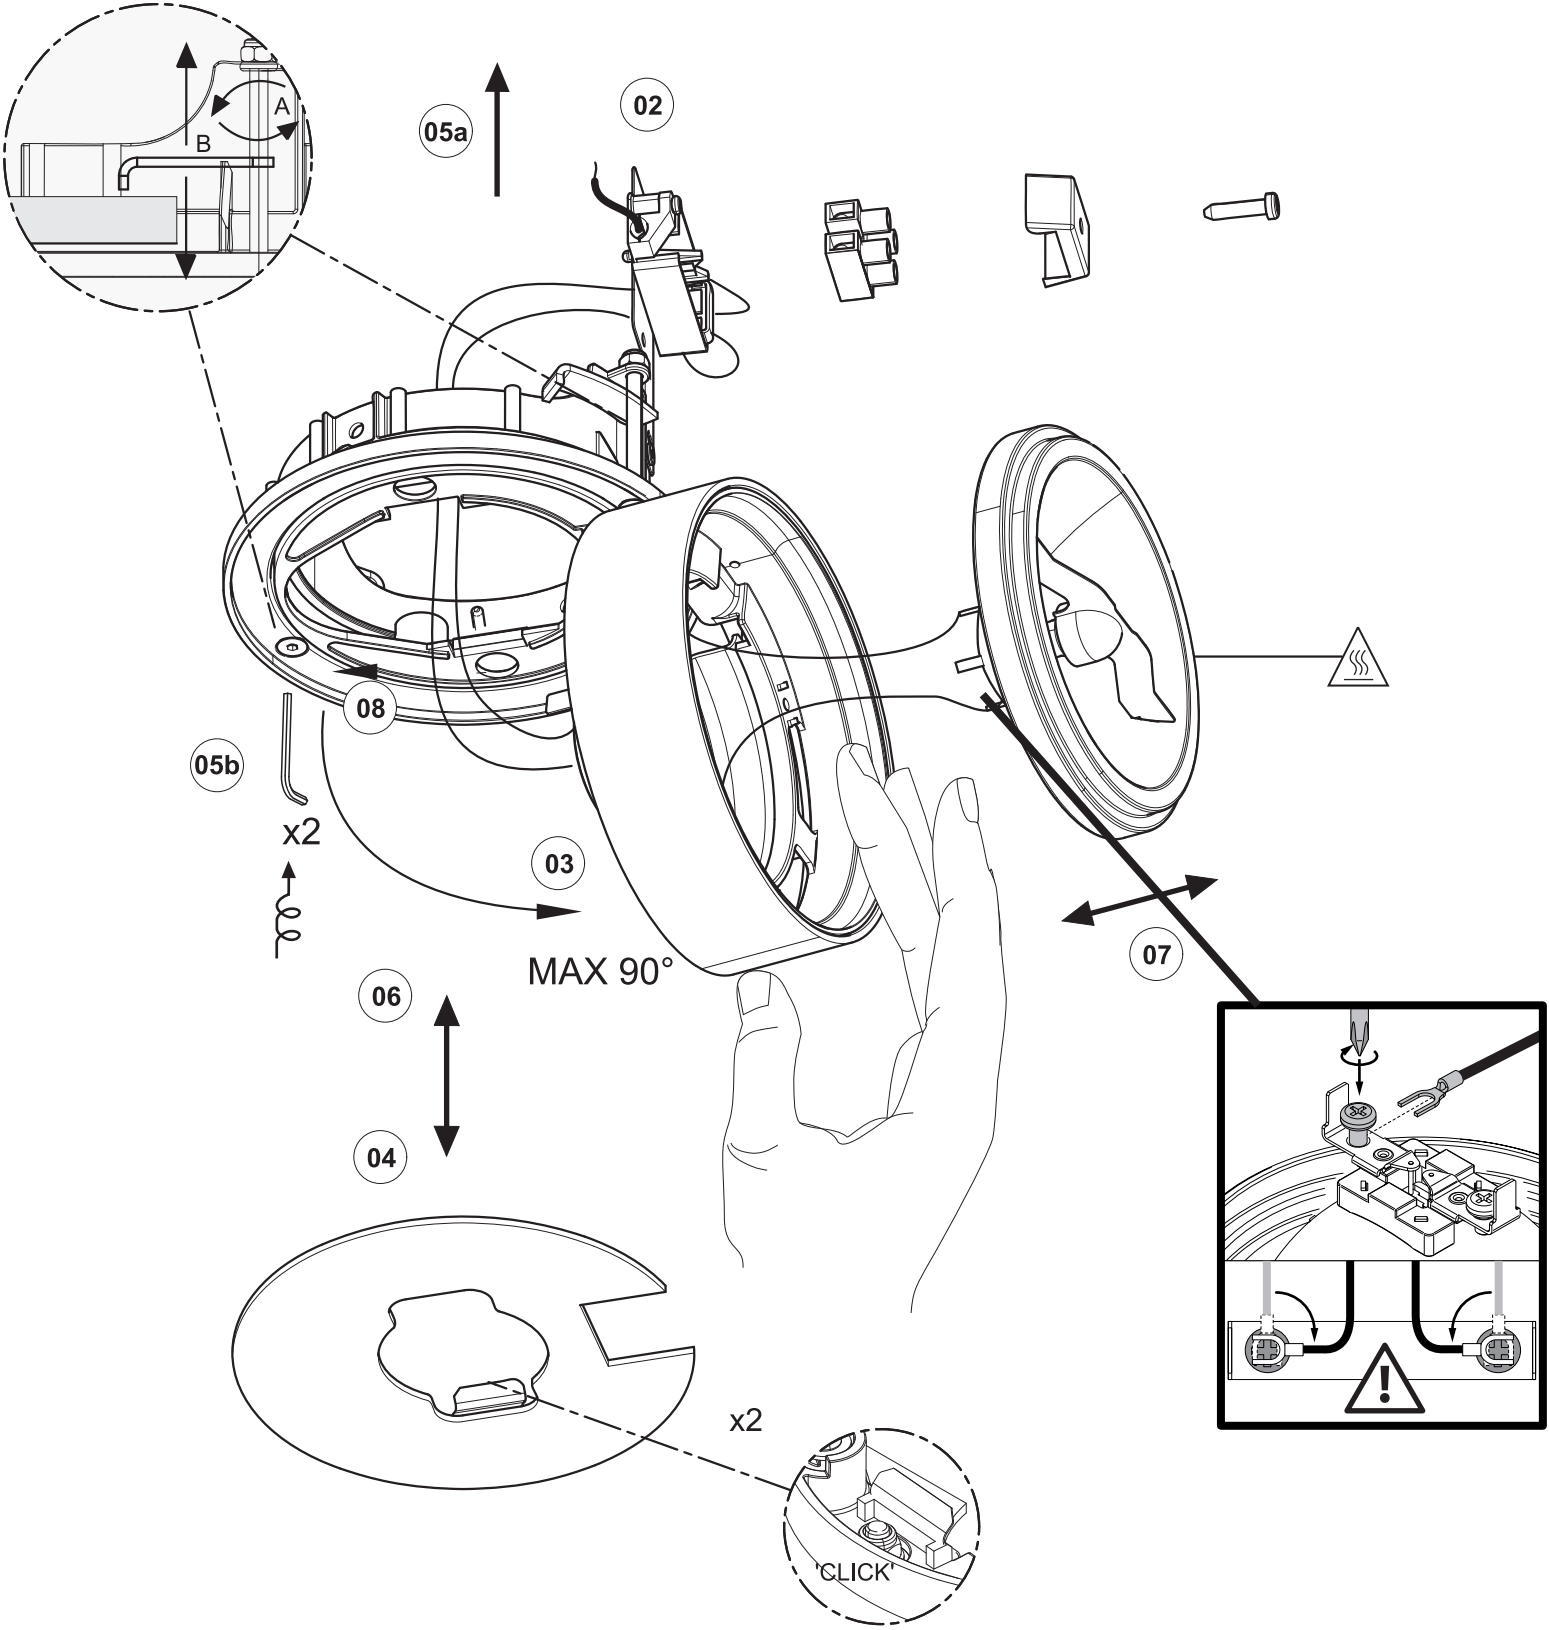

ACCESSORY SET

DIN 911/2,5

1X

ACCESSORY SET

05

FIX

V