



EICHHOLTZ


112648 WALL LAMP JADE

ASSEMBLY INSTRUCTION




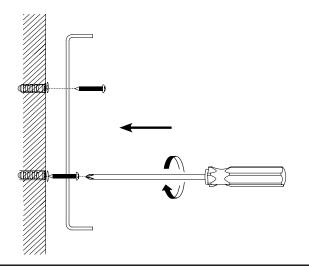


2 Connect the 3 wires according to their colours. Brown is the live wire, blue is the neutral wire, green/yellow is the earth wire.

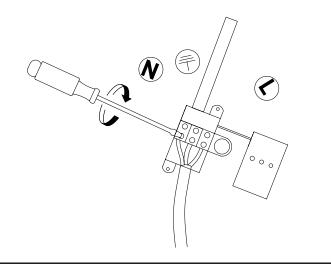


3 Place the lamp over the wall plate and fix it securely with the screws supplied.

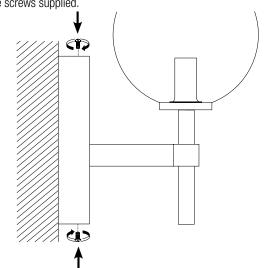


4 Place the glass shade then through the metal tube on the lampholder and fix it with the metal ring.

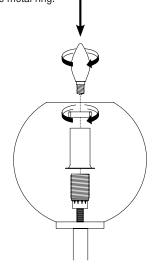

5 Place the bulb to the lampholder.

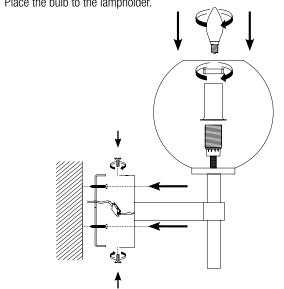

FINAL

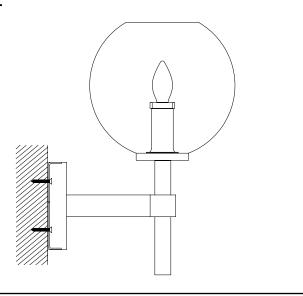

Eichholtz B.V. | Delfweg 52 | 2211 VN Noordwijkerhout | P.O. Box: 23, 2160 AA Lisse | The Netherlands | www.eichholtz.com