

RONY

07-Apr.-2016

1.0 LED

LED 7/10W | 350-500mA | COB 3-step | excl. power supply
CE **P20** **960° C** **0,9m** **36°** **P** **35°/35°** **355°**

white texture	110161W_
black texture	110161B_
white texture (blade springs)	110161W_C

LIGHT COLOUR

2700K >90CRI 420-590lm 18Vf	3
3000K >90CRI 470-640lm 18Vf	5
1800-2850K >90CRI 320-440lm 18Vf	9

ALWAYS USE
 for power supplies see our catalogue

1.0 MR16

QR-CBC51 max. 50W | GU5.3 | 12V | excl. transformer
CE **P20** **960° C** **0,9m** **35°/35°** **355°** DO NOT COVER WITH INSULATION

white texture	110110W0
silver / grey	110110S0
black texture	110110B0
white texture (blade springs)	110110W0C

ALWAYS USE
 for transformers see our catalogue


1.0 PAR16

PAR16 max. 50W | GU10 | 220-240VAC | 50-60Hz
CE **P20** **960° C** **0,9m** **35°/35°** **355°** DO NOT COVER WITH INSULATION


white texture	110120W0
silver / grey	110120S0
black texture	110120B0
white texture (blade springs)	110120W0C

ALWAYS USE
 for PAR16 lamps see our catalogue

①

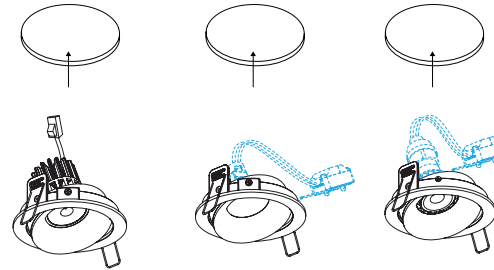


②

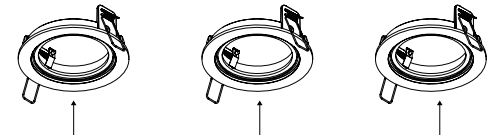


③



④



DIMENSIONS

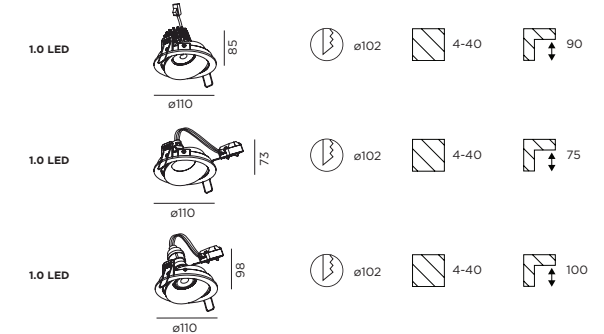


MOUNTING INSTRUCTION

- ① Make a hole in the ceiling according to the prescribed dimensions.

POWER CONNECTION


- ② SERIAL CONNECTION - for LED

Always use POWER SUPPLY
 according to the specifications of the LED-module




PARALLEL CONNECTION - for MR16

Always use 12V TRANSFORMER



PARALLEL CONNECTION - for PAR16



- ③ Insert the lamp into the inner part of the RONY
- ④ Click the inner part of the RONY into the outer part



WEVER & DUCRÉ
 LIGHTING

www.weverducre.com

**INSTALLATION
 INSTRUCTIONS**