

SEEK GAP

18-03-2015

1.0 LED

LED 5/7W | 350-500mA | 13Vf | COB 3-step | excl. power supply
 CE IP20 960° C 0.3m 36° 35°/35° 25°/25°

3000K | >80CRI | 350-465lm
 white texture
 white texture + black
 black texture

128461W4
 128461E4
 128461B4

ALWAYS USE

plaster kit
 for power supplies see our catalogue

90017107

2.0 LED

LED 2x5/7W | 350-500mA | 13Vf | COB 3-step | excl. power supply
 CE IP20 960° C 0.3m 36° 35°/35° 25°/25°

3000K | >80CRI | 2x350-465lm
 white texture
 white texture + black
 black texture

128561W4
 128561E4
 128561B4

ALWAYS USE

plaster kit
 for power supplies see our catalogue

90017108

3.0 LED

LED 3x5/7W | 350-500mA | 13Vf | COB 3-step | excl. power supply
 CE IP20 960° C 0.3m 36° 35°/35° 25°/25°

3000K | >80CRI | 3x350-465lm
 white texture
 white texture + black
 black texture


128661W4
 128661E4
 128661B4

ALWAYS USE


plaster kit
 for power supplies see our catalogue

90017109


①

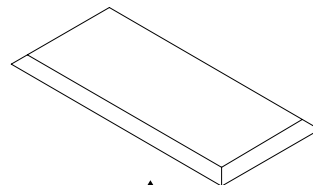

②



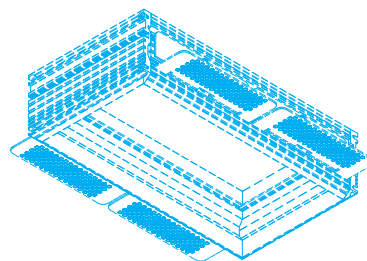


④



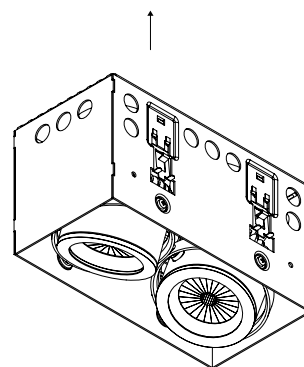


DIMENSIONS




1.0 LED

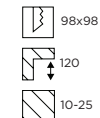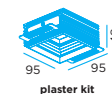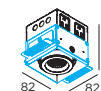

2.0 LED

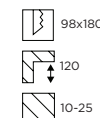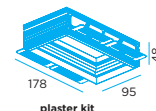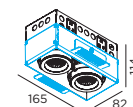

3.0 LED

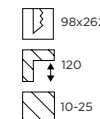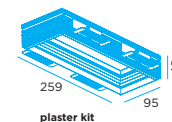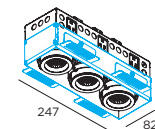


MOUNTING INSTRUCTION

- ① Make a hole in the ceiling according to the prescribed dimensions (always use a plaster kit)
- ② Insert the plaster kit into the ceiling and adjust the height by loosening the screws on the side and plaster the borders seamlessly

POWER CONNECTION

③ SERIAL CONNECTION

Always use **POWER SUPPLY**
 350mA / 500mA

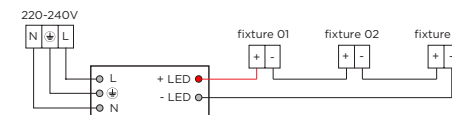

- ④ Insert the SEEK GAP in the hole.



WEVER & DUCRÉ
 LIGHTING

www.weverducre.com

**INSTALLATION
 INSTRUCTIONS**