

# SNEAK TRIMLESS 2.0

05-Jul.-2017

## 2.0 LED

LED 2xLED 7/10W | 350-500mA | 18Vf | COB 3-step | excl. power supply

CE IP20 10.3m 32° 35°/35° 355°

white texture	155251W_
black texture	155251B_


### LIGHT COLOUR

2700K   >90CRI   2x335-470lm	3
3000K   >90CRI   2x375-510lm	5
1800-2850K   >95CRI   2x255-350lm	9

### ALWAYS USE


plaster kit	90017117
for power supplies see our catalogue	

plaster kit (has to be ordered separately)




## 2.0 LED


①

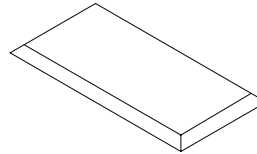

②

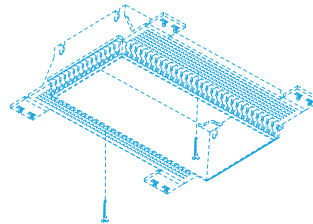

④

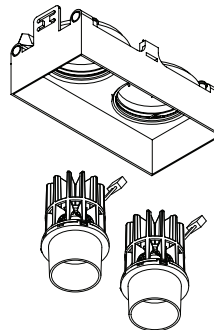

## DIMENSIONS




## MOUNTING INSTRUCTION

- ① Make a hole in the ceiling according to the prescribed dimensions (always use a plaster kit)
- ② Click in the plaster kit into the ceiling and screw it tightly on the ceiling, then plaster the borders seamlessly.

## ③ POWER CONNECTION

SERIAL CONNECTION - for LED

**Always use POWER SUPPLY according to the specifications of the LED-module**



- ④ Insert the fixture in plaster kit.  
Place the LED-module in the fixture.



**WEVER & DUCRÉ**  
LIGHTING

[www.weverducre.com](http://www.weverducre.com)

Wever & Ducré bvba Kwadestraat 153 bus 2.1 8800 Roeselare

**INSTALLATION  
INSTRUCTIONS**