


CYCLONE


30-11-2015

17.0 LED

LED 70W | 220-240VAC | PCB 3-step | DALI dim | aluminium powder coated | opal LLDPE body
CE IP20 0.3m P
3000K | >80CRI | 7000lm
white texture 219185W4

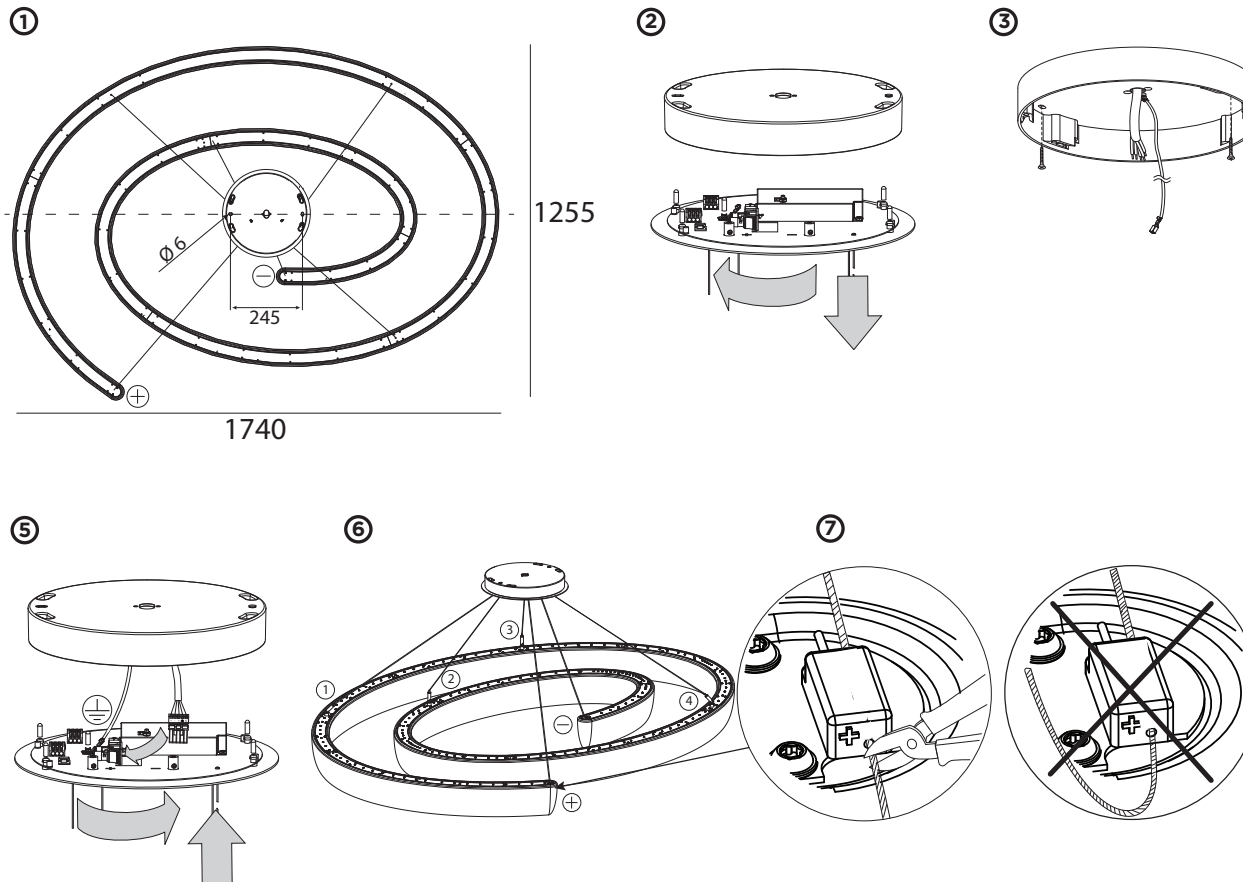


DIMENSIONS

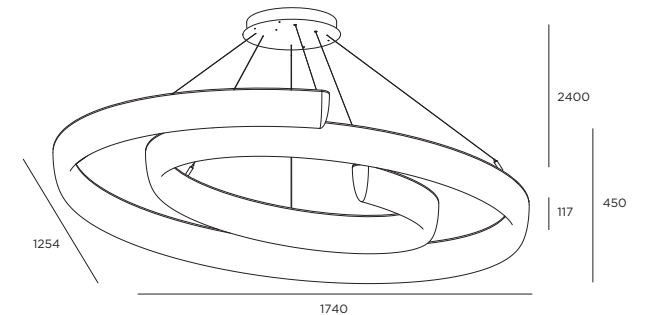

MOUNTING INSTRUCTION

- ① Mounting Situation from top view
- ② Open the Baldachin
- ③ Mount the housing with two screws (12Kg)
Attention ! observe the direction!

Install supply plug

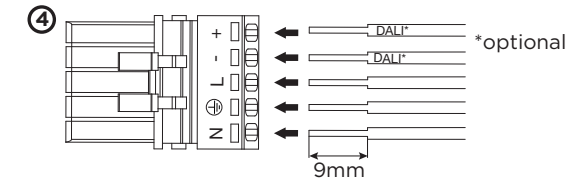

Plug the cables

- ⑤ plug the grounding cable (PE) and plug the supply plug and close the baldachin.
- ⑥ Correct position of the ropes of the Luminaire.
- ⑦ cut ropes
ropes may not have contact with the sheet metal.
- ⑧ Only turn on the light after completing the mounting.



WEVER & DUCRÉ
LIGHTING

www.weverducre.com

INSTALLATION
INSTRUCTIONS