COCOZ SQUARE

06-07-2015

1.0 LED111

LED 13W | 220-240V | 50-60Hz | AC-COB 3-step | phase-cut dim

CE ☐ IP20 960°C ◖0,3m 🔆 ⟋38° ⤸ 25°/25° ↻ 365°

	white texture + gold	119268J_
	black texture + chrome	119268U_

LIGHT COLOUR

2700K	>80CRI	640lm	2
3000K	>80CRI	680lm	4

1.0 QR111

QR111 max. 75W | G53 | 12V | excl. transformer

CE ◈ IP20 960°C ◖0,9m 🔆 TE ⤸ 25°/25° ↻ 365° 🕸 DO NOT COVER

	white texture + gold	119230J0
	black texture + chrome	119230U0

ALWAYS USE
for transformers see our catalogue

1.0 HIR111

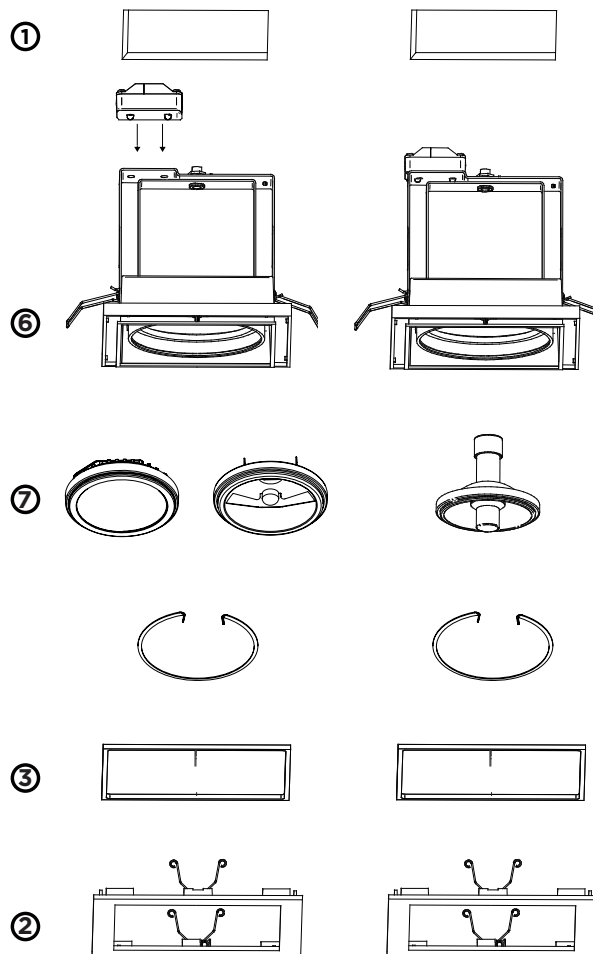HIR-CE111 35/70W | GX8.5 | 220-240VAC | 50-60Hz | excl. ballast

CE ⏚ IP20 960°C ◖0,7m 🔆 ⤸ 25°/25° ↻ 365° 🕸 DO NOT COVER

	white texture + gold	1192H0J0
	black texture + chrome	1192H0U0

ALWAYS USE
for electronic ballasts see our catalogue

DIMENSIONS

1.0 LED111	175 / 19 / 161 / 161	145x145	2-25	180
1.0 QR111	175 / 19 / 161 / 161	145x145	2-25	180
1.0 HIR111	175 / 19 / 161 / 161	145x145	2-25	180
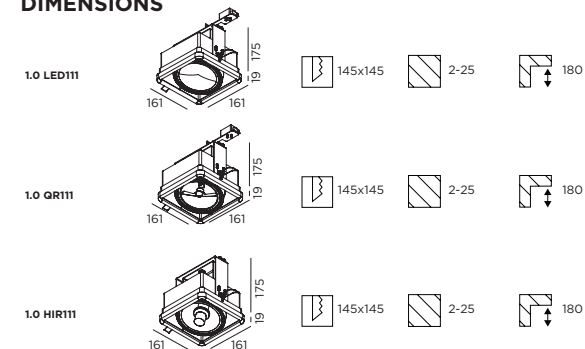
MOUNTING INSTRUCTION

① Make a hole in the ceiling according to the prescribed dimensions.

② Remove the top plate

③ Insert the colour frame

④ Reposition the top plate and colour frame with the springs

POWER CONNECTION

⑤ **for LED111 | QR111**

N
L

Click the connector set on the housing.
Put the cable through the middle hole (see indicated arrow), so that rotation is still possible, and connect to the connector.

for HIR111

N
⏚
L

Connector set is already on the housing

⑥ Insert the fixture in the hole

⑦ Place the LED/LAMP into the fixture and fix with spring

www.weverducre.com

WEVER & DUCRÉ LIGHTING

INSTALLATION INSTRUCTIONS